

Special case


1 - If the floor of the shower tray is thicker than 10 mm, separate the seal. **2** - Cut above the lower sealing bead. **3** - Place the lower part on the drain housing and the upper part in the drain hole.



Access to the drainage system (cleaning)

Make sure that the odour trap is not damaged during the cleaning process.


1 - Remove sieve. **2** - Pull out immersion pipe. **3** - Remove the sealing plug by turning gently with pliers. **4** - Clean the drain pipe with an appropriate cleaning process. **5** - Insert the sealing plug flush by hand. **6** - Note the plug position. **7** - Position the immersion tube and mount the cover. **8** - Mount the sieve.

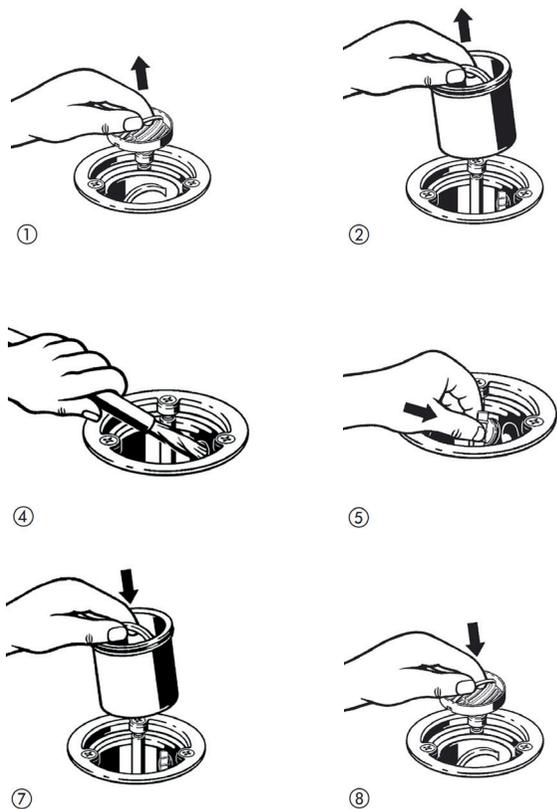



Tempoplex Drain Installation and Maintenance Guide

Tempoplex Shower Drain


The Tempoplex drain is suitable for installation in flat and superflat shower trays with a 90 mm drain hole. Only the usual kinds of household waste water up to 95°C may be fed in. Feeding in other liquids is not allowed. No harmful substances are to be fed in, such as cleaning agents which damage sanitary equipment, draining elements and pipe materials, and particularly those with a pH value ≤ 4 . Specialist firms should carry out installation with consideration given to the provisions. The shower drain conforms to EN 274.

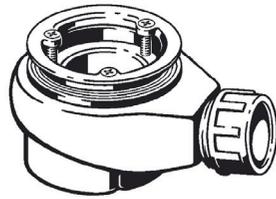

Modelo 80

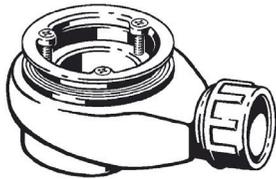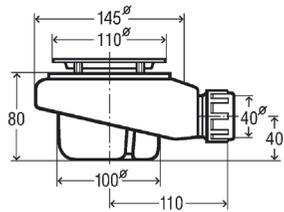


Modelo 60

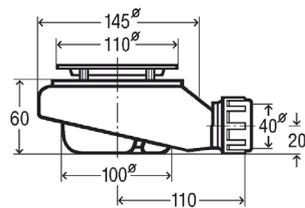



Components

- 1 - Sieve
- 2 - Immersion tube
- 3 - Clamping collar with screw
- 4 - Seal
- 5 - Water trap

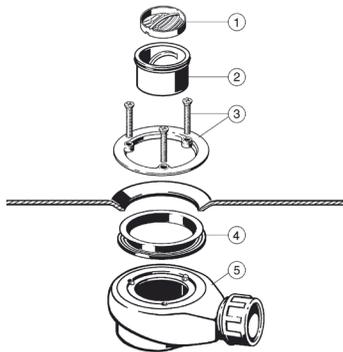

Installation Procedure

Before installation, check whether the draining rate of 0.6l/s with a 15 mm panned-up height is sufficient. **1** - Place double seal on the sealing surface and press into the retaining groove. **2** - Position drain piece with seal under the shower tray. Guide the upper section of the double seal through the drain hole. **3** - Screw in the fixing screws by hand. **4** - Tighten the screws evenly. Do not use a cordless screwdriver. **5** - Insert immersion tube into the water trap. **6** - Insert sieve.

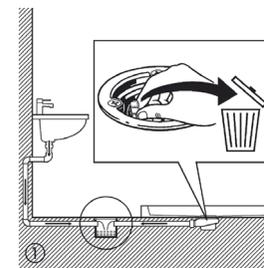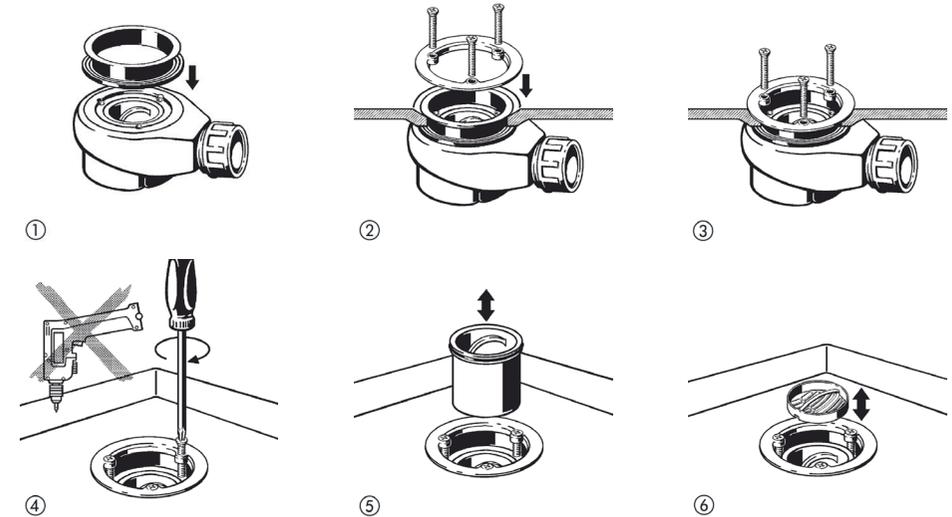

Mounting at central drain.

- 1** - When mounting a central drain, the immersion tube and plug are removed.
- 2** - When using a sieve, the immersion pipe should be shortened to 1.5 cm.
- 3** - Insert immersion pipe.
- 4** - Mount sieve.

